
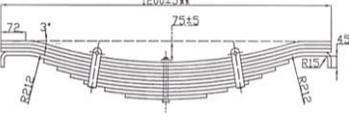
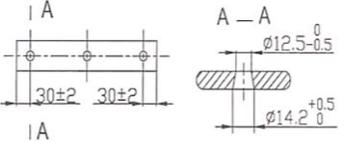
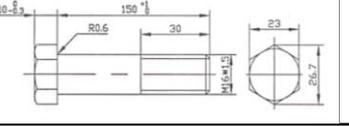
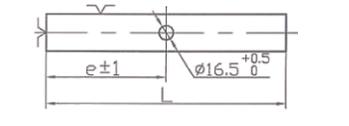
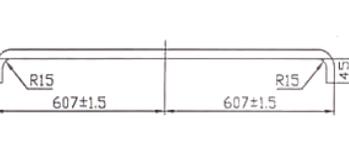


مصادر الجزيرة

سسته الماني
108215

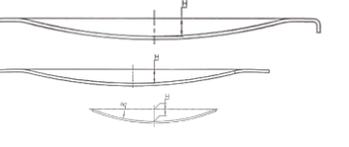

الطراز: 1001310-0004

	مخطط التجميع
	رسم تخطيطي لثقب البرشام على طرفي ٨ قطعة ٠٣١ (الطول ٤٧٠):
	رسم تخطيطي للمسمار الرئيسي
	رسم تخطيطي للثقب الرئيسي
	رسم توضيحي لانشاء أطراف أربع قطع:
	رسم توضيحي لعملية قياس الارتفاع الفردي.

تحتوي السوست متعددة الطبقات (السوست الهرمية) على مجموعة من طبقات زنبركية ذات مقاطع عرضية مختلفة وأطوال متدرجة لتعطي شكل هرمي. وتتميز بمتانتها وخصائص القيادة الافتراضية الجيدة. بالإضافة إلى سهولة استبدال طبقات الزنبرك الفردية. تتركب الأطراف الزنبركية بالمحاور باستخدام مسامير زنبركية على شكل حرف U.

باعتباره أحد المكونات الحاملة لوحدة التعليق، يتطلب الزنبرك الورقي اهتمامًا خاصًا. وينبغي الالتزام بالتعليمات التالية بعناية أثناء أعمال الإصلاح والصيانة:

- ❖ لا تستخدم المطرقة أو أي أدوات حادة مع السوست.
- ❖ لا تستخدم القواطع مع السوست.
- ❖ في حالة عدم توافق السوست البديلة تمامًا مع مقعد منصات السوست أو مبيت السوست، يجب دائمًا توسيع مقعد التثبيت.
- ❖ يمكن استبدال السوست الفردية مع السوست متعددة الأوراق.





لمزيد من الخدمات والمنتجات
قم بزيارة موقعنا الالكتروني :

www.masader-j.com



Integrated transportation solutions
High quality and safety

Masader AL-Jazeera

Leaf Spring
108215



Model : 1001310-0004

Multi-leaf springs (trapezoidal springs) contain a stack of spring layers with different cross-sections and graded lengths to give a trapezoidal shape.

They are characterised by their robustness and good default driving properties as well as the ease of replacing individual spring layers. The spring ends of the leaf springs are connected to the axles with spring U-bolts.

As a load-bearing component of the suspension unit, the leaf spring requires particular attention during repair and maintenance work:

- ❖ The following instructions should be carefully adhered to: Do not work on leaf springs with a hammer or any sharp objects.
- ❖ Do not work on leaf springs with cutters or grinders.
- ❖ In the event that replacement springs or leaves do not fit exactly into the seat of the spring pads or spring housing, the mounting seat must always be widened.
- ❖ Individual leaves can be replaced in multi-leaf springs.

Assembly diagram	
Schematic drawing of the rivet holes on both ends of 8 pieces 031 (length 470):	
Schematic diagram of the main screw	
Schematic drawing of the main hole	
Illustration of the bending of the ends of four pieces:	
Illustration of the individual height measurement process.	





For more Products & Services
Visit our Web site :

www.masader-j.com

